



SCS30

Solar Powered Hanging Scale Operation Manual

SPECIFICATIONS

Power:	Solar Cell (min. 400 LUX)
Operating Temperature:	32 to 104° F (0 to 40 ° C)
Display:	Five digit, seven segment, 1.0 inch (25 mm) high LCD
Annunciators:	lb, kg, $\rightarrow 0 \leftarrow$ (Zero),  (Solar Charge Status)
Capacity:	30lb x 0.01 lb (15kg x 0.005kg)
NTEP:	Class III, Certificate of Conformance Number 15-009

UNPACKING

Before beginning installation of your scale, make certain it has been received in good condition. When removing the scale from its packing, inspect it for signs of damage, such as exterior dents and scratches. Keep the carton and packing material for return shipment if it should become necessary. It is the responsibility of the purchaser to file all claims for any damages or loss incurred during transit. You should have the following items:

- (1) SCS30 Scale
- (2) Carabiners
- (1) Bow Assembly
- (1) Ring Assembly
- (2) Pan Bow Nuts
- (2) Wing Nut 5/16-18
- (1) Pan



SETUP

1. Insure that the light available is adequate to power the scale (typically an average lighted room is 400 LUX. This is adequate to power the scale.

NOTE: Make sure nothing is shading the solar cell from the available light. Low lighting will result in the scale display showing $\perp$ or $\square$.

2. Referring to Figure No. 1, install a carabiner on top loop of scale.
3. Hang scale from a support that is strong enough to support the scale PLUS the weight of the item to be weighed.
4. Follow the Hanging Assembly instructions to complete the required assembly.
5. The scale has been calibrated with the enclosed hanging assembly. In order to display zero, the hanging assembly must be attached.
6. Scale is now ready to use.



Figure No. 1



WARNING! Failure to attach the scale to a support of sufficient strength using a connector to hold the scale PLUS the weight of the item to be weighed can result in the scale coming loose and damaging the scale and/or injuring the operator and persons nearby.

HANGING ASSEMBLY

The SCS30 is shipped with a bow and pan hanging assembly. The hanging assembly is made up of four (4) main components.

Carabiner

Bow

Ring and bow attachment hardware (Pan Bow Nuts and 5/16-18 Wing Nuts)

Pan

Assemble the hanging assembly as illustrated in Figure No. 2. The hanging assembly is then attached to the lower loop on the scale. Place pan in Ring.

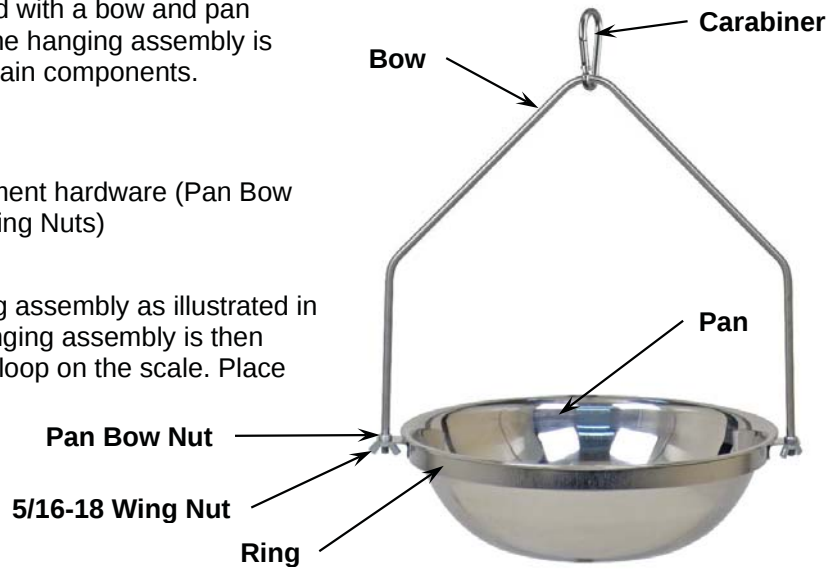


Figure No. 2

OPERATION

1. Hang scale from a secure position with minimum 400 LUX lighting level. Make sure nothing is shading the solar cell from the available light.
2. Referring to Figure No. 3, press Zero Button to zero scale.
3. To change between units (lb to kg or kg to lb), press and hold Zero Button for approximately 5 seconds.
4. Place item to be weighed in pan.
5. Display will show weight of item.
6. Remove product and press Zero Button if required before weighing next item.



Figure No. 3

NOTE: If scale is not weighing full capacity and *Err* is displayed, with hanging assembly and pan to be used with scale, press and hold Zero Button for 10 seconds to reset scale.

DO'S AND DON'TS

- **DO** hang scale from a support that is strong enough to support the weight of the scale PLUS the weight of the material to be weighed. The more rigid the support the better.
- **DO** ensure that the scale is not shaded from the available light.
- **DO** avoid shock loading the scale, i.e. do not drop heavy loads in the pan.
- **DO** check the hanging assembly wing nuts on a regular basis to ensure they are tight.
- **DO** check on a regular basis the scale's supporting hardware to ensure that it continues to provide the strength necessary to support the weight of the scale PLUS the item to be weighed.
- **DO NOT** spray; water directly on the scale.
- **DO** clean scale using a damp, soft cloth and mild detergent.
- **DO NOT** use acetone, alcohol, or other volatile solvents for cleaning.

CALIBRATION

NOTE: Calibration must be performed under plenty of light with hanging assembly and pan to be used with scale.

1. Remove the calibration seal to expose the Test Pins. See Figure No. 3 on previous page for seal location.
2. Referring to Figure No. 4, short Test Pins 3-4 to enter calibration mode. The display will show the internal count (zero count) when in the calibration mode. (Please note "kg" or "lb" unit for selecting the calibration weight).
3. Press Zero Button to set calibration ZERO.
4. Place 15kg or 30lb test weight in pan and wait for scale weight to stable.
5. Press Zero Button to set calibration SPAN.
6. CAL will be displayed for approximately 3-5 seconds.
7. After calibration is finished, scale will automatically return to Normal Mode and display will show 15kg/30lb.


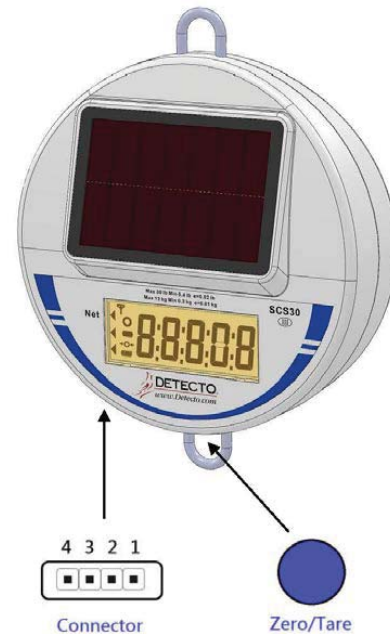


Figure No. 4

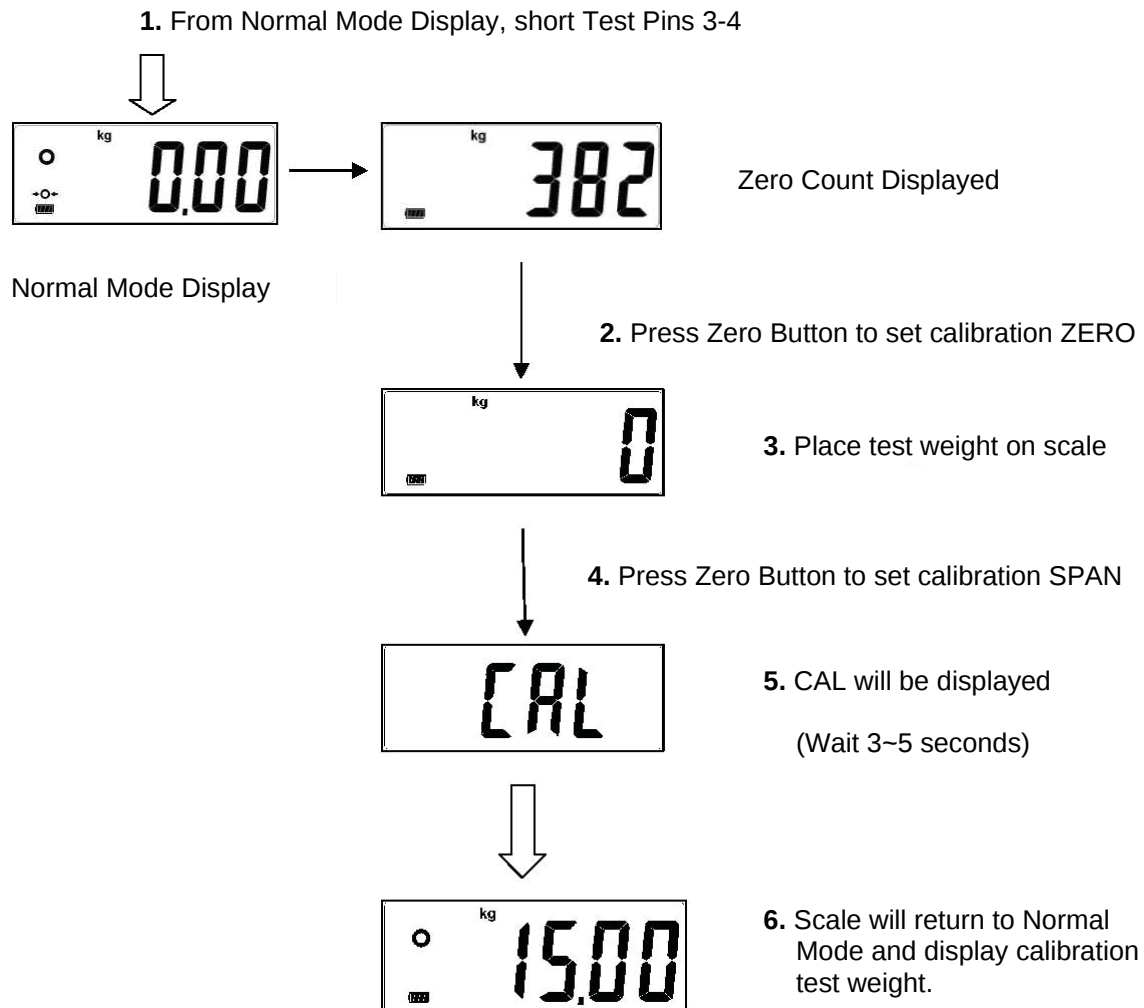

STATEMENT OF LIMITED WARRANTY

DETECTO warrants its equipment to be free from defects in material and workmanship as follows: DETECTO warrants to the original purchaser only that it will repair or replace any part of equipment which is defective in material or workmanship for a period of **two (2) years from date of shipment**. Detecto shall be the sole judge of what constitutes a defect.

During the **first ninety (90) days** DETECTO may choose to replace the product at no charge to the buyer upon inspection of the returned item.

After the first ninety (90) days, upon inspection of the returned item, DETECTO will repair or replace it with a remanufactured product. The customer is responsible for paying for the freight both ways.

This warranty does not apply to peripheral equipment not manufactured by DETECTO; this equipment will be covered by certain manufacturer's warranty only.

This warranty does not include replacement of expendable or consumable parts. This does not apply to any item which has deteriorated or damaged due to wear, accident, misuse, abuse, improper line voltage, overloading, theft, lightning, fire, water or acts of God, or due to extended storage or exposure while in purchaser's possession. This warranty does not apply to maintenance service. Purchased parts will have a ninety (90) day repair or replacement warranty only.

DETECTO may require the product to be returned to the factory; item(s) must be properly packed and shipping charges prepaid. A return authorization number must be obtained for all returns and marked on the outside of all returned packages. DETECTO accepts no responsibility for items lost or damaged in transit.

Conditions Which Void Limited Warranty

This warranty shall not apply to equipment which:

- A.) Has been tampered with, defaced, mishandled or has had repairs and modifications not authorized by DETECTO.
- B.) Has had serial number altered, defaced, or removed.
- C.) Has not been properly grounded according to Detecto's recommended procedure.

Freight Carrier Damage

Claims for equipment damaged in transit must be referred to the freight carrier in accordance with freight carrier regulations.

This warranty sets forth the extent of our liability for breach of any warranty or deficiency in connection with the sale or use of the product. DETECTO will not be liable for consequential damages of any nature, including but not limited to, loss of profit, delays or expenses, whether based on tort or contract. Detecto reserves the right to incorporate improvements in material and design without notice and is not obligated to incorporate improvements in equipment previously manufactured.

The foregoing is in lieu of all other warranties, express or implied including any warranty that extends beyond the description of the product including any warranty of merchantability or fitness for a particular purpose. This warranty covers only those DETECTO products installed in the forty-eight (48) contiguous continental United States.



Ph. (800) 641-2008
E-mail: detecto@cardet.com
102 E. Daugherty
Webb City, MO 64870

04/22/2024
Printed in USA
D268-WARRANTY-DET-B



DETECTO

102 E. Daugherty, Webb City, MO 64870 USA

Ph: 417-673-4631 or 1-800-641-2008

Fax: 417-673-2153

www.Detecto.com

Technical Support: 1-866-254-8261

E-mail: tech@cardet.com